

ENVIO

Instructions

ENVIO roof racks

EN series

 
 
 
 
 


ONVME


Instructions

2010-2011

10-11-12

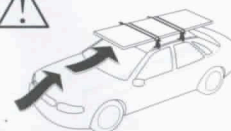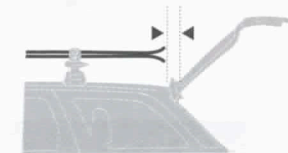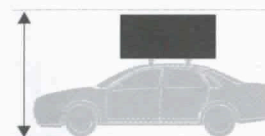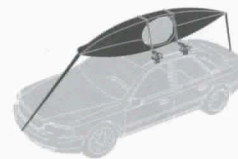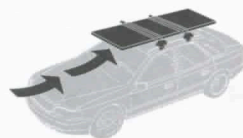

80 km/h
50 Mph

 

i

 


Max
90kg




MAX :130 km/h
90 Mph

Min25mm
Max55mm

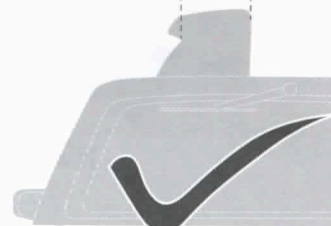


Integrated Rail

 
Min25mm
Max55mm

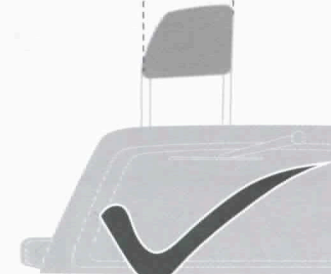


Separated Rail

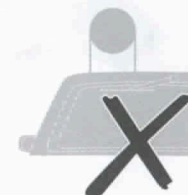 


EN ROOF RACKS

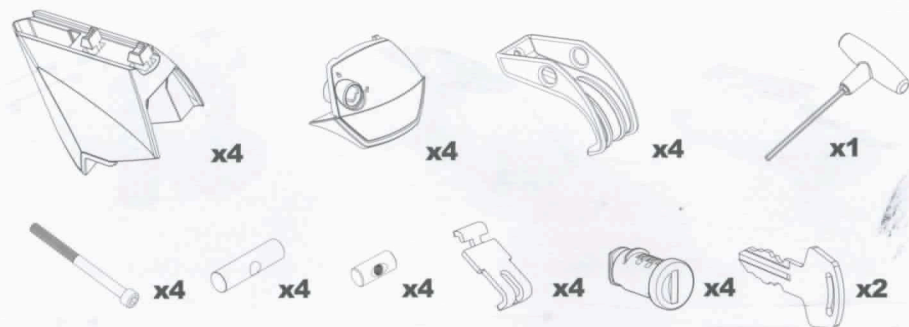 

ENW

 

ENM

 

ENS

 


1




2


A

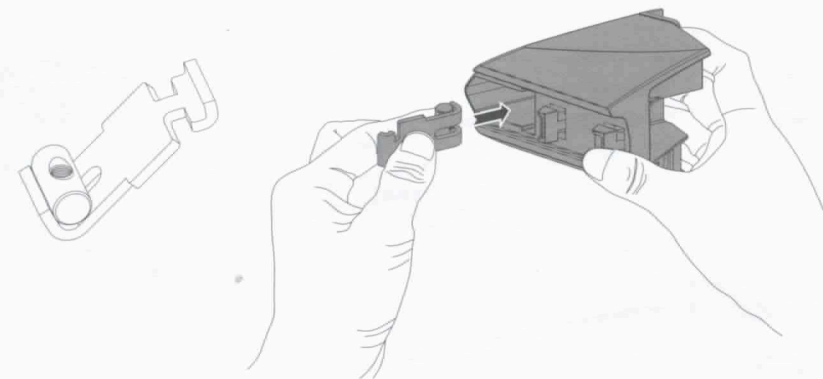


B

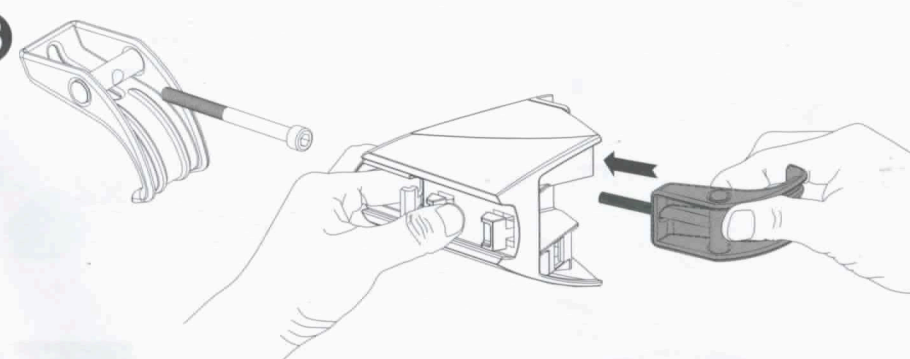 


C

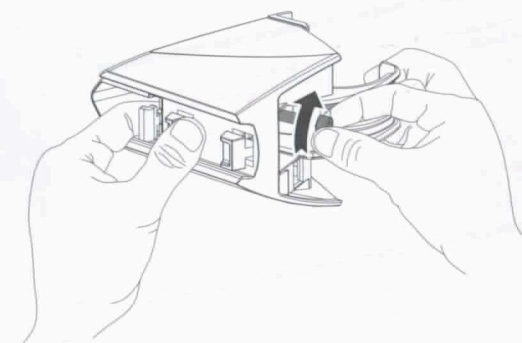 

D

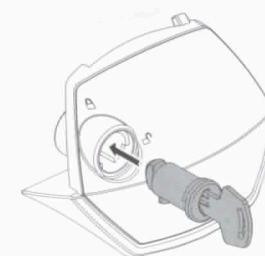 

E

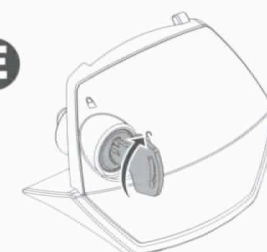 

3

A



 
ENW

B



x2

A

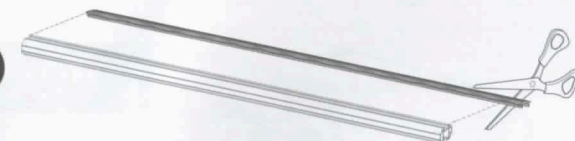

ENM

B



x2

4

ENW



x2

ENM



x2

 
ENS



x2

5



A

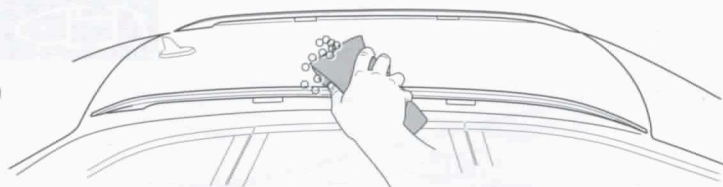

B




  6

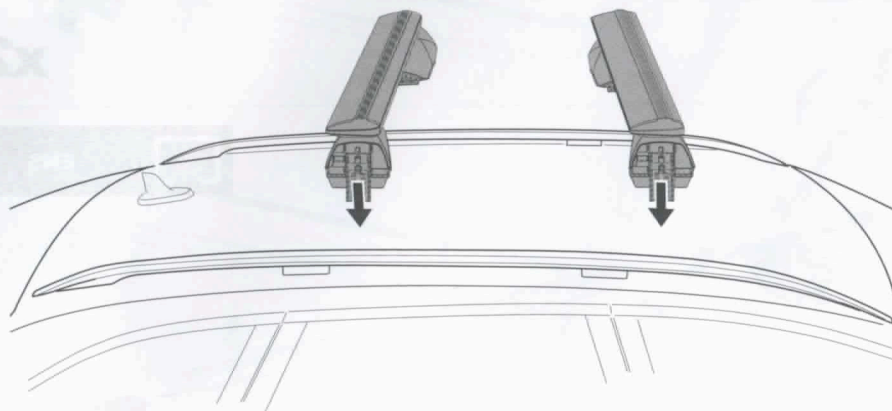


7



 
Min 700 mm

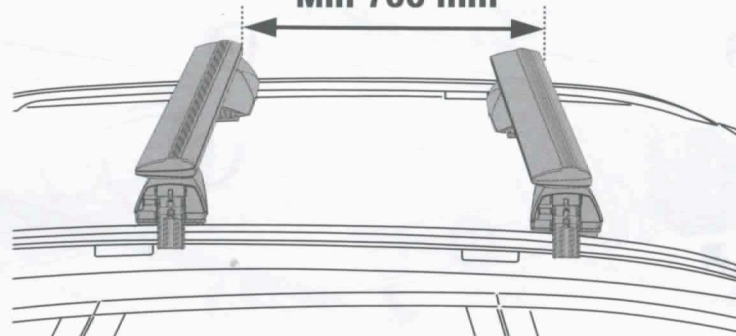


8

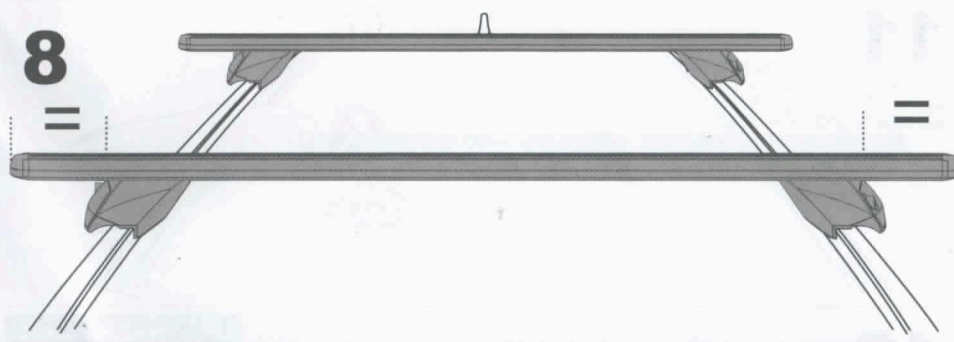 


9

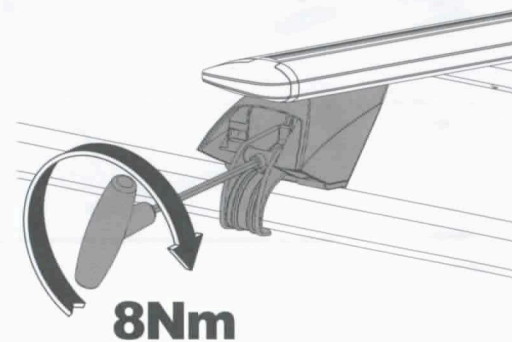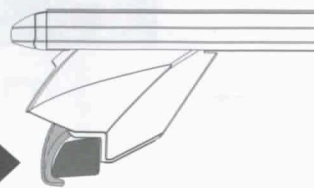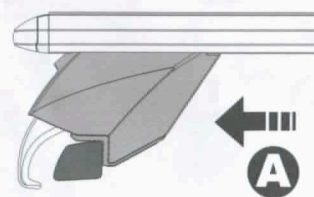   



10

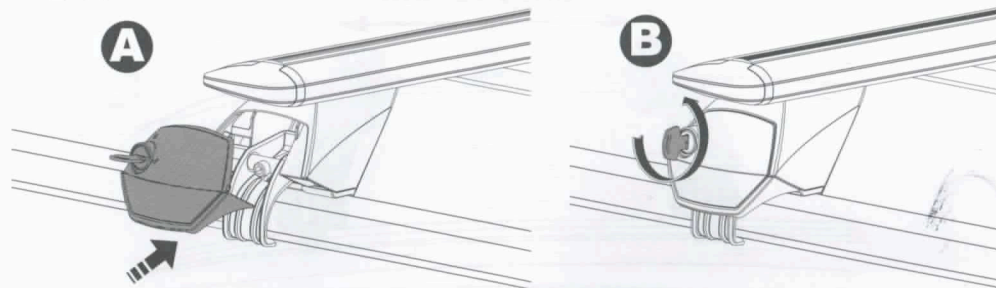 

11

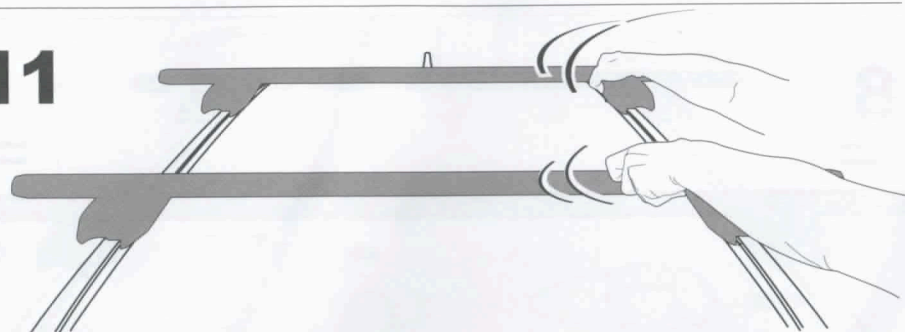 

12

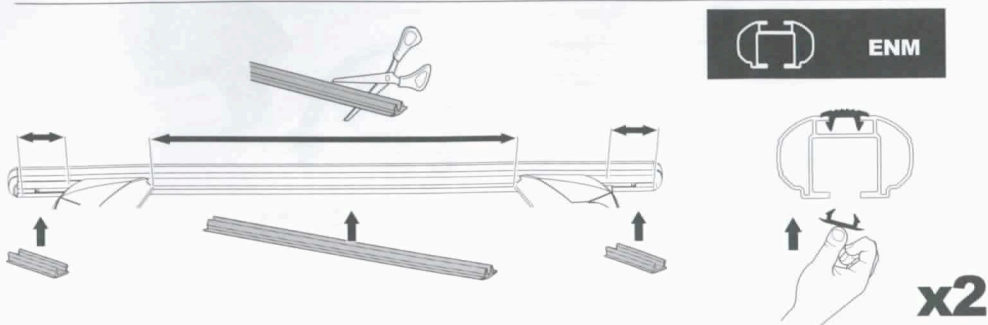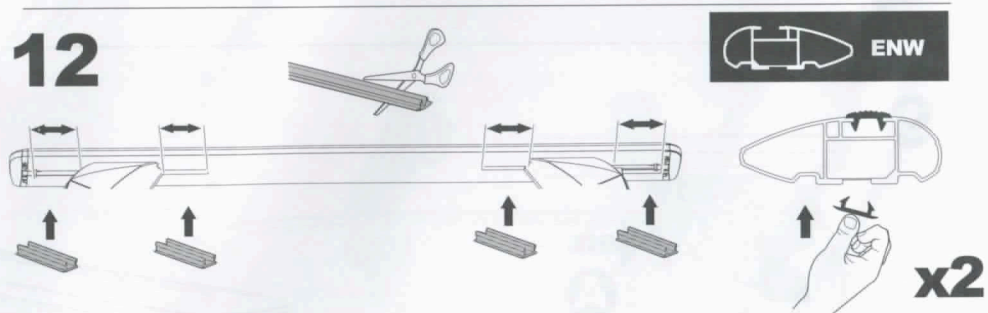  

i

